



65" 4K Ultra High Definition LED LCD Smart TV

Model number: ATVS65-1116

## GETTING STARTED

### 1 PARTS LIST

In the box you will find:

- 1 x 65" (165cm) 4K Ultra High Definition LED LCD Smart TV
- 1 x Remote Control
- 2 x AAA Activ Energy Batteries (not pictured)
- 1 x Composite AV Cable (not pictured)
- 2 x Stand Bases (including screws)
- 1 x Instruction Manual
- 1 x Getting Started guide




#### WHAT YOU WILL NEED

 
- A Phillips-Head Screwdriver (for stand installation)
- Antenna Cable
- Broadband Internet Connection (to access Smart TV apps and Catch Up TV features)
- (Optional) Wireless keyboard and mouse (for easy smart app interactivity and web browsing experience)

### 2 CONNECTIONS

- 1 LAN Input
- 2 HDMI Inputs
- 3 Headphones Output
- 4 Coaxial Output
- 5 Optical Output
- 6 Video Input (Composite)
- 7 L/R Audio Input (shared with Composite and Component video inputs)
- 8 Antenna Input
- 9 USB 3.0 Input
- 10 Y/Pb/Pr Input (Component)
- 11 USB 2.0 Input

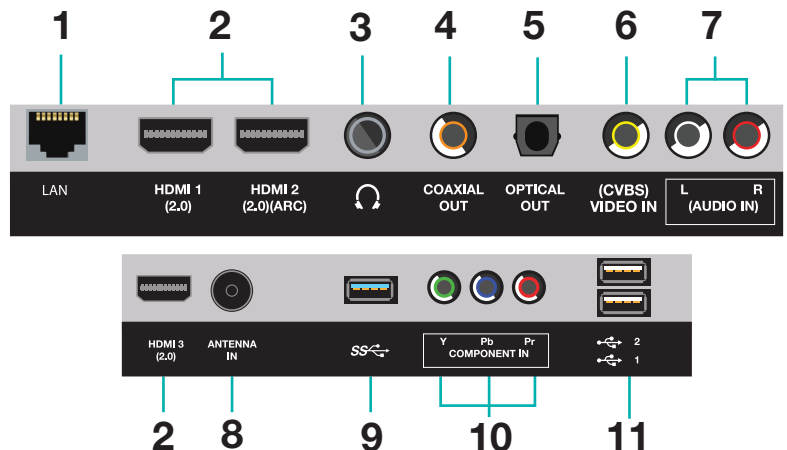

### 3 CONNECT TO POWER

- 1 Install the stand (see page 5 of the instruction manual).
- 2 Connect the antenna cable to the ANT socket of the TV.
- 3 Connect RJ45 LAN cable to the LAN socket of the TV (for wired Internet connection); or turn on your Wi-Fi modem/router (for Wi-Fi Internet connection).
- 4 Insert batteries into the remote control.
- 5 Connect the TV power cord into the mains power socket and turn on the mains power.
- 6 Press the  button on the remote control to turn on the power to the unit. The standby light will turn blue and the TV screen will display the initial setup.

### 4 REMOTE CONTROL

- Information on all remote control functions can be found on page ii of the Instruction Manual.
- Be careful not to cover the infrared sensors with your fingers while using the remote control in keyboard mode.
- Always point the remote control transmitters directly at the TV.



**5 EASY SETUP SCREEN**  
 The On-Screen Display (OSD) gives you easy instructions for setting up the unit. Follow the OSD instructions to connect the TV to the Internet and scan TV channels. Please refer to the Instruction Manual for detailed information.



**6 QUICK PICTURE AND SOUND SETTINGS**

**Picture**


Press the P-Mode button on the remote control to quickly change the picture style to one of the preset styles.

You can further adjust the Brightness, Contrast, Colour Saturation and Sharpness of the picture by going to Menu > Picture. The changes you make will be saved under 'Personal' picture style.

**Sound**

Press the S-Mode button on the remote control to quickly change the sound style to one of the preset styles.

**7 WEB BROWSER**

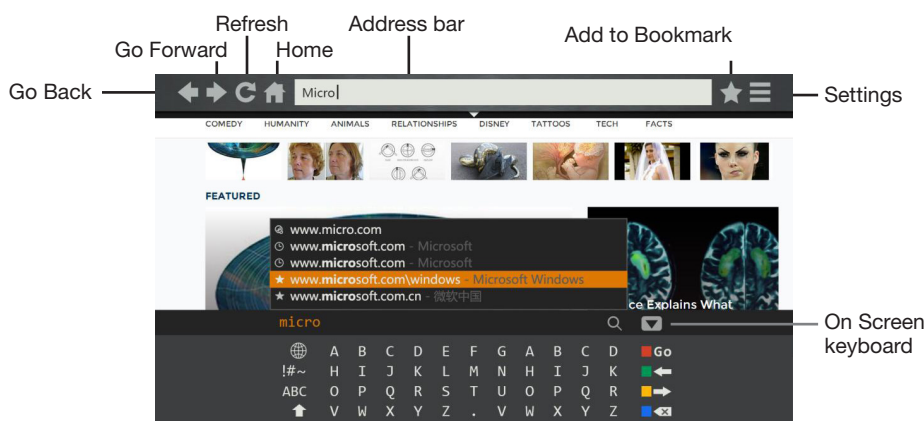

- Press the **RED** button to bring out the address bar.
- Press OK button on the address bar to type the web address. You can enter the web address using the on-screen keyboard, remote keyboard or connected wireless keyboard.
- See page 24 of the Instruction Manual for more information.

**8 ONLINE SUPPORT**

Software updates over the internet are available directly from your TV's menu.

Alternatively visit the following web page to check for software updates as well as the latest Instruction Manual with information on the latest features.

[http://www.tempoaustralia.com/support/sw/Bauhn/9824\\_ATVS65-1116/update.html](http://www.tempoaustralia.com/support/sw/Bauhn/9824_ATVS65-1116/update.html)

