

8-Way Surge Powerboard

Model Number: ASPP-0419

INSTRUCTION MANUAL

AFTER SALES SUPPORT

  1300 886 649

 www.tempo.org

Model: ASPP-0419 Product Code: 8998 04/2019



Welcome

Congratulations on choosing to buy a BAUHN® product. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

Welcome	2
Warranty Details	4
General Safety Instructions	5
Product Overview	7
Specifications	8
Troubleshooting	9
Repair and Refurbished Parts or Goods Notice	10



8-Way Surge Powerboard

Warranty Details

Register your purchase at www.aldi.com.au/en/about-aldi/product-registration to stay updated with important product information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference. The safety precautions below reduce the risk of fire, electric shock and injury when correctly adhered to.

Important Safety Warnings:

- **Damage:** If the surge powerboard or cord is damaged, contact the After Sales Support line for advice. Do not attempt to open the board or replace the cord. The cord must be replaced by appropriately qualified personnel.
- **Repair:** If the unit requires repair, contact the After Sales Support line; never disassemble or modify the unit or attempt to service it yourself.
- Run the power supply cord in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the equipment. Close supervision is always necessary when any appliance is used by or near children.
- This surge powerboard is designed for indoor use in dry places only.
- Do not exceed a maximum loading of 2400 watts.
- For safety reasons, always use earth connections.
- Only use this surge powerboard with the power supply cord fully unwound.
- Before installing the unit, make sure to place it away from: heat sources, radiators or other products that produce heat; areas with high temperatures, high humidity or direct sunlight; excess dirt and dust; open windows and any place where water may get to the unit.
- Do not immerse the cord, plug or the surge powerboard in water or other liquid, or expose the electrical connections to water or other liquid.
- Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use.
- The product should always be repacked in its original packaging whenever transporting to prevent any possible damage to the device.
- **When not in use:** Disconnect from the power source and store in a cool, dry and well ventilated location out of direct sunlight, and not subject to humidity.
- **Warning:** Discard this unit if the Supply Cord is damaged.
- **Warning:** The socket outlet should be located near the equipment and should be easily accessible.

General Safety Instructions (Cont.)

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Responsible disposal of the packaging

The packaging of the product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Cleaning the product


Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power sockets and plug pins with a clean, dry cloth.

This product complies with Australian Safety standard AS/NZS 3105, AS/NZS 60950 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

Product Overview

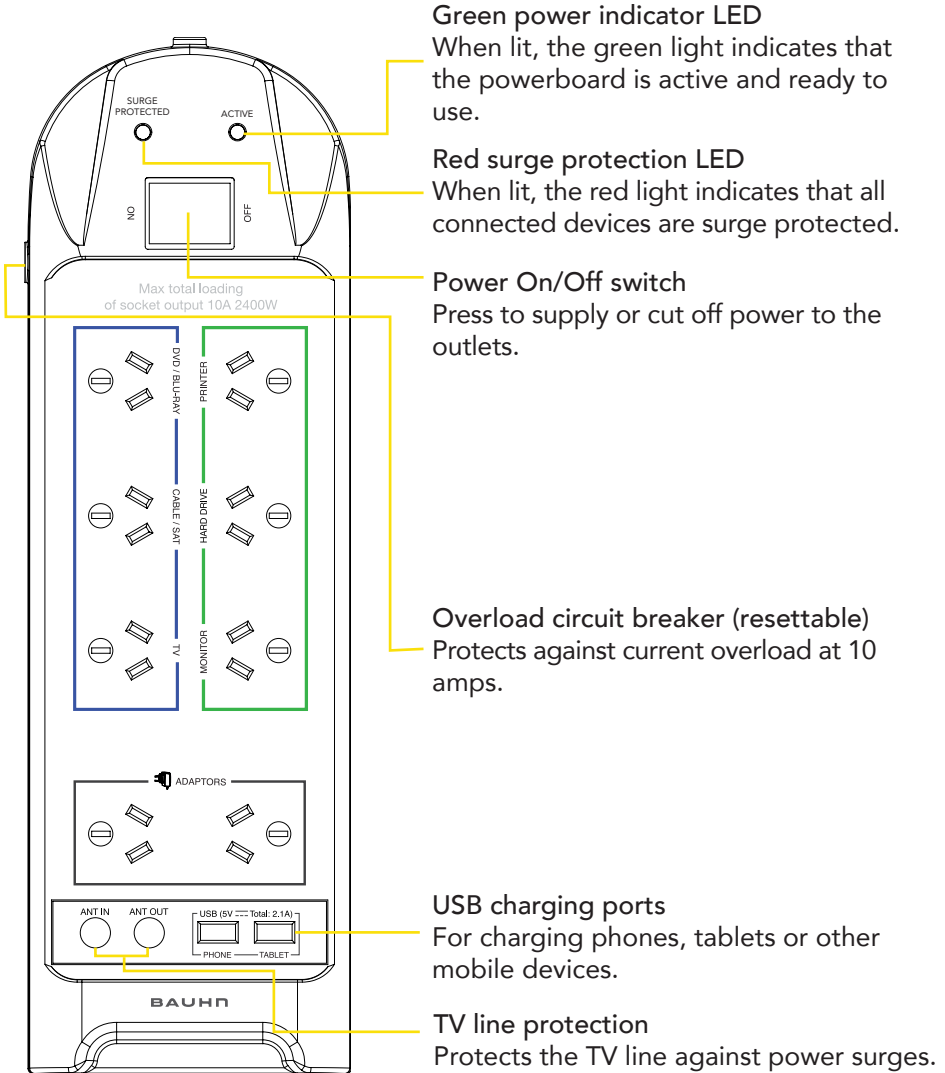

Specifications

Input	AC 240V, 50Hz 10A
Total Loading	Max 10A 2400W
Maximum Energy	1050J
Surge Protection Limit	36,000A
USB Output	DC 5V, Total 2100mA Max.
Power Cable	1.1m
Mass	630g (approx.)
Dimensions (L x W x H)	385 x 120 x 38 mm

Manual Version Number 1.0
Manufacture Date Apr 2019

Troubleshooting

Problem	Solution
No power output from one of the sockets	<ul style="list-style-type: none">• Try other sockets. If other sockets have power output, it's probably the contact of one faulty socket that is loose or not connected; avoid using that socket.
No power output from any of the sockets	<ul style="list-style-type: none">• Check the power switch is turned on (you can try to turn it on and off a few times to make sure it's switched) and the ACTIVE indicator is lighted up.• Check the overload circuit breaker button to see whether it's tripped, push it down to reset the circuit breaker.• Make sure the input socket for the power board has power output.
The TV cable signal is weak, or there is no signal at all	<ul style="list-style-type: none">• Check the two cable connectors are firmly connected to the ANT-IN and ANT-OUT ports; you can try unplugging them and then plugging them back in; also turn the cable connector clockwise or counter-clockwise to help make better contact for the connectors.• Disconnect the cable and connect your TV directly to the wall ANT socket, to make sure it's not an issue with the source signal.



8-Way Surge Powerboard

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO Box 6056 Frenchs Forest, NSW 2086, Australia

Tempo Help Desk: 1300 886 649 (Aust)

(Operating Hours: Monday-Friday 8:30am-6pm; Saturday 9am-6pm AEST)

Email: info@tempo.org



This page has been intentionally left blank.



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.